

□ 24"x60"	□ 30"x60"	□ 36"x60"	□ —"x—"
□ 24"x72"	□ 30"x72"	□ 36"x72"	□ 48"x84"
□ 24"x84"	□ 30"x84"	□ 36"x84"	□ 48"x96"
□ 24"x96"	□ 30"x96"	□ 36"x96"	

Set-up Instructions

Always wear ANSI approved safety goggles when assembling this product. The goggles are not included.

A. Open case and remove display frame.

1

B. Then tighten graphic roll and remove graphic. Lay graphic on clean floor or carpet with print side down.

2

While graphic remains print side down, insert Top and Bottom Poles into the top and bottom pole pockets.

3

A. Unseal Purple Wrap on frame and assemble poles to locked position.

Slide Black Tie Wrap to the middle of the X-Legs and carefully lay the frame on the graphic.

B. Be sure that Gray End Tips are located at the top of the graphic and Black End Tips located at the bottom of the graphic.

C. The "Y" shaped Tripod should be located at the bottom of the graphic, in between the X-Legs, with each Ring near a Black End Tip.

4

A. Starting at the bottom, place foot on bottom edge of graphic to stabilize the graphic position.

B. Guide this assembly parallel to the edge of the graphic and insert into Hub of Bottom Pole. Repeat this step for remaining Black End Tip and Ring.

5

A. Now at the top, place foot on top edge of graphic to stabilize the graphic position.

B. Guide Gray End Tip parallel to the edge of the graphic and insert into Hub of Top Pole. Repeat this step for remaining Gray End Tip.

6

Adjusting to Desired Angle

Lift display from behind by using the display frame to hold on to. Correct display angle if needed.

Tip: To change the display angle of a section, position a foot on Tripod, a hand on X-Leg and a hand on Black Tie Wrap. For more back angle, push X-Legs down through the Black Tie Wrap. For more forward angle, pull the X-Legs up through the Black Tie Wrap.

Xtra Lite Warranty

Our X, S, T, E, M, P and B lines of frames come with a Lifetime Repair and Replace Warranty. If any of these frames break in the ordinary course of use, we will repair or replace the unit for \$10 per frame, or \$20 for roll-ups, plus return shipping. All other frames and accessories come with a One Year manufacturer's Limited Warranty against defects.

XL1 Tripod Repair Procedure

Innovation
For Results®



Set-up Instructions

Always wear ANSI approved safety goggles when assembling this product. The goggles are not included.

Steps for field replacement of broken tripod tie wrap

Bold indicates the tripod section

Left Leg Right Leg

Discard broken Tie Wrap

1 ↑ Insert plastic repair cord into loop of remaining bundy cord between left and right tripod leg tubes.

2 ↑ Insert plastic repair cord into back of upright tripod tube and pull bundy up to top of

3 ↑ Screwdriver Tie wrap

4 ↑ Screwdriver being pulled out AFTER securing the tie wrap

Two long legs
Cut off extra flap of Tie Wrap flush with Tie Wrap head.

3 Start here if tie wrap is NOT broken but needs to be upgraded or replaced.
Insert short repair tube into the top bundy loop. Now remove plastic repair cord. Pull up bundy cord loop with the repair tube and slip in under it a new tie wrap strap in between upright tripod tube and repair tube.

4 With the repair tube still inserted –put long unit legs next to the upright tripod leg and wrap tie wrap around them both.
Next secure them together with the tie wrap by inserting the tie wraps tapered tail end into the tie wrap head and pull the tapered tail tightly.
Now pull out the repair tube and continue pulling tighter on the tail of the tie wrap until the upright tripod leg and the two long leg tubes become one tight bundle. Now trim off the excess tapered tail at the tie wraps head.

Xtra Lite Warranty

Our X, S, T, E, M, P and B lines of frames come with a Lifetime Repair and Replace Warranty. If any of these frames break in the ordinary course of use, we will repair or replace the unit for \$10 per frame, or \$20 for roll-ups, plus return shipping. All other frames and accessories come with a One Year manufacturer's Limited Warranty against defects.